

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:
Please save this product guide.

W301 Outlast Shed 62"

W306 Outlast Shed 44"

W505 Outlast Art Shed

CUSTOMER SERVICE:

United States

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

Sales@CommunityPlaythings.com



Recommended Use

The Outlast Storage shed is intended for the storage of children's play equipment at the point of use. Designed to neatly house the Outlast Crates and Outlast Blocks, this shed simplifies end of day cleanup with the help of children under the guidance of the caregiver. This shed can be placed on any reasonably level area, whether grass, dirt, chips or pavement. Once leveled with leveling pads (provided) and built-in adjustable feet, it is ready for use.

The Outlast art shed is intended for storage of art supplies at the point of use. Sturdy aluminum rails inside and on the doors provide space to hang bins of supplies, providing child accessible display and flexibility in the configuration of the bins. Close the doors and hang selected bins on the outside to limit which materials are accessible.

The door latch can be locked with a 9/32" or 5/16" padlock with extra-length shackle (not included).

The roof is strong, child friendly and waterproof with a wooden gutter.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment and therefore adult supervision is required at all times.
- ▲ Shed is not a play structure.
- ▲ Do not climb on shelves or bins.
- ▲ This item is heavy. Do not attempt to move it without a minimum of 4 strong adults.
- ▲ Over time, shed or ground may settle. Periodically inspect shed for stability, and adjust feet as necessary.

⚠ Caution

- ▲ Shed must be leveled prior to use to assure stability and proper latching.
- ▲ Leveling pads (provided) must be used if shed is placed on dirt, chips, grass or similar surfaces.
- ▲ Do not stack leveling pads more than four high.
- ▲ Do not place heavy objects on top shelf where children can pull them down.
- ▲ When doors are open, latch them against the side of the shed to prevent children from playing with them.
- ▲ Do not exceed maximum weight limit on the bins.

Assembly

Your Outlast Shed comes in one shipment containing:

1. One Outlast Shed.
2. Six leveling pads.

W301 Outlast Shed 62" W306 Outlast Shed 44" W505 Outlast Art Shed

Your outlast Art Shed comes with:

1. One Outlast Art Shed, a set of 3 large bins, 12 medium bins, 8 small bins, and 6 leveling pads
2. A separate shipment containing 3 shallow crates
3. A separate shipment containing 1 paper roll holder

If your shipment is incomplete, please call Customer Service.

Cleaning

Mud and dirt can be removed with scrub brush and water. Over time in outdoor settings outside surfaces may blacken with mildew. A bleach solution or safe detergent can be used to remove blackness.

Maintenance

Acetylated wood weathers a natural silver-grey if left untreated, outdoors. If you prefer the original look, scrub with a bleach or detergent solution. When dry, apply a tinted, nontoxic penetrating stain, then apply a nontoxic mildewcide to minimize mildew growth.

Periodically check that shed is stable and level. Adjust front leveling feet to align doors.

Periodically inspect for splinters, broken or loose parts, and/or malfunctions. Remove from service when any condition develops that might make operation unsafe.

Construction

The wooden components are manufactured from long lasting acetylated wood and finished with a tinted nontoxic stain. All edges and corners are rounded for safety and ease of cleaning. Stainless steel hardware is used throughout and plastic components are formulated to ensure long life in sun, or varying temperature conditions. The roof has no sharp edges and is built from solid wood moldings with a plastic underlayment to ensure maximum strength as well as waterproofing.

User Modifications

We are not responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:
Please save this product guide.

W301 Outlast Shed 62"

W306 Outlast Shed 44"


W505 Outlast Art Shed

Installation Instructions

⚠ WARNING


Shed is large and heavy. Use care maneuvering into location. We recommend that the shed be installed by experienced personnel. For proper function of doors and latch, shed must be level and stable.

- 1 Choose a level site. May include grass, dirt, chips or pavement.
- 2 Place a leveling pad under each corner of the shed unless it is installed on a hard even surface like a porch or pavement. With two people, lift one corner of the shed (shed should be empty). Slide a leveling pad under the round foot. Repeat for all four corners.

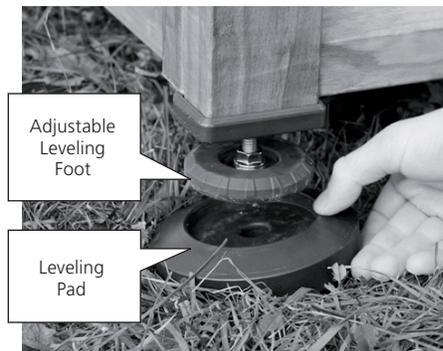

- 3 Determine if shed is installed in a level position using a level on the floor of the shed. If further leveling is needed, use additional leveling pads to adjust the height of each corner. For smaller adjustments, turn the leveling feet in or out. If more than an inch of thread is showing above the foot, use an additional leveling pad instead. **Do not use more than four leveling pads in one corner.**

- 4 Check that the tops of the shed doors align. Adjust leveling feet again to achieve correct door alignment if necessary. **Note:** if the shed doors are not aligned, the latch will not function properly.

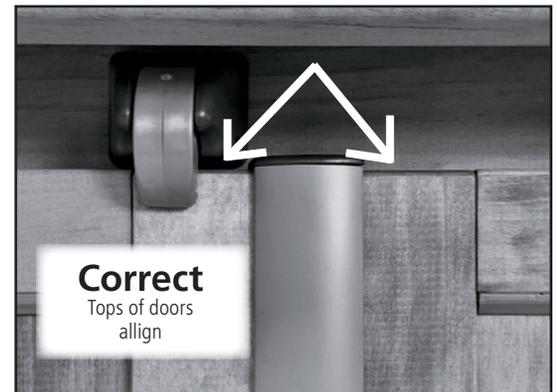

Congratulations!

Now your shed is ready for years of use!

CUSTOMER SERVICE:

United States

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

Sales@CommunityPlaythings.com



W301 Outlast Shed 62"



W306 Outlast Shed 44"



W505 Outlast Art Shed