Product Guide

User and Maintenance Information

Important
Information:
Please save this
product guide.

J806 6" Mealtime Chair J807 6" Mealtime Chair with Tray J808 8" Mealtime Chair J809 8" Mealtime Chair with Tray J810 10" Mealtime Chair J811 10" Mealtime Chair with Tray

Recommended Use

The Mealtime Chair is for children ages 6 months to 24 months, covering three developmental stages in the growing child. The chair encourages healthy posture, giving back support with feet flat on the floor.

The first stage uses the Mealtime Chair with the Mealtime Seat and Tray.

The second stage uses the Mealtime Chair with Mealtime Seat, and the child sits at the table.

The third stage uses the Mealtime Chair without the Mealtime Seat or Tray, and the child sits at the table.

A WARNING

▲ This product is intended for use by children of immature judgment. Therefore adult supervision is required at all times.

- ▲ Do not leave the child unattended.
- ▲ Do not use the chair unless all components are correctly fitted and adjusted.
- ▲ The tray is not designed to hold the child in the chair. It is recommended that the chair be used only by children capable of sitting upright unassisted.
- ▲ Never place child on stacked chairs. Stacking is for storage purpose only.
- ▲ Stack no more than five high to prevent instability.
- ▲ Mealtime Chairs have a maximum working load of 100 lbs (45kg.)

A CAUTION

▲ For indoor use only. This chair is not waterproof.

Customer Service:

United States

PO Box 2 Ulster Park, NY 12487 Office hours: 9-5 EST Phone (800) 777-4244 Fax (800) 336-5948 (845) 572-3468 www.CommunityPlaythings.com Sales@CommunityPlaythings.com





Page 2

User and Maintenance Information

Mealtime Chairs J806, J807, J808, J809, J810, J811

Assembly

Your shipment comes in one carton containing:

- 1. One Mealtime Chair.
- 2. Product Guide.

If your shipment is incomplete, please call Customer Service.

To attach optional Seat Belt, thread buckle up through gap at back of seat and push clips into indentations on back (see Fig A.)



Figure A

To attach Mealtime Seat, stand in front of chair and place Seat against back of chair. Push down on inside of armrests to latch in place (see fig. B). To remove Mealtime Seat, grasp handles, push thumbs down on inside of armrests and pull up and out with your fingers to release latches.



Figure B

To attach Tray to Mealtime Chair, slide it over armrests of Mealtime Seat until both latches engage in armrest holes. To remove or adjust Tray, pull on latches to disengage from armrest holes.

Accessories

- J413 Chair Dolly
- J425 Tray
- J439 Seat Belt

Storage

Everything stacks: the chairs stack with or without the seat insert in place. The seat inserts stack, and the trays stack when placed alternately front to back.



Figure C

Maintenance

Periodically inspect for cracks, breaks, loose parts, loose screws, missing parts, and/or malfunctions. Remove product from service when any condition develops that might make operation unsafe.

Cleaning

Wipe wooden chair with damp cloth and mild detergent or disinfectant. Do not use excessive water. Optional Seat Belt is removable and machine washable. Clean plastic tray and seat with any mild soap or detergent. Avoid abrasive cleaners, aromatic spirits, and cleaning solutions containing pine oil (such as Lysol®). Some of these agents can cause plastic to weaken and crack.

Construction

Wooden components are manufactured from solid maple and finished with a clear nontoxic finish. All edges and corners are rounded for safety and ease of cleaning. Tray and plastic seat are smooth, washable plastic. Optional Seat Belt is made of sturdy polypropylene webbing and the locking buckle and attachment clips are made of durable plastic. Chair tips are molded rubber.

User Modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.

Customer Service:

United States

Ulster Park, NY 12487 Office hours: 9-5 EST Phone (800) 777-4244 Fax (800) 336-5948 (845) 572-3468

www.CommunityPlaythings.com Sales@CommunityPlaythings.com



© 2014 by Community Products, LLC HD81 DC 6684 Revision E