

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:
Please save this product guide.

CUSTOMER SERVICE:

United States

PO Box 2
Ulster Park, NY 12487
Office hours: 9-5 EST
Phone (800) 777-4244
Fax (800) 336-5948
(845) 572-3468

www.CommunityPlaythings.com
Sales@CommunityPlaythings.com



H507/H527/H824 Extra Magnetic Whiteboards

Recommended Use

These replacement magnetic whiteboards are intended for use with Community Playthings.

H507 for the Mini Art Island.

H527 for the Art Island

H824 for the Multi-Purpose Easel.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment therefore supervision is required at all times.

Assembly

Equipment comes in a single carton containing:

1 whiteboard

If your shipment is incomplete, please contact Customer Service.

1. Place the bottom edge of the whiteboard panel in the green hooks.
2. Secure the panel by screwing in the white clips to catch the top edge or the sides according to the orientation of the board. See Fig. 1. There are right-hand and left-hand clips. A clip is on the correct side (left or right) of the easel when the lip points down.

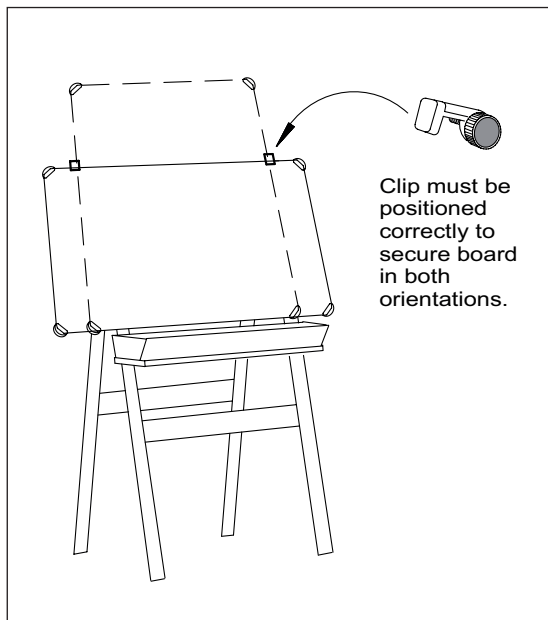


Figure 1

Adjustments

Re-orient the whiteboard by loosening the knobs, rotating the panel 90°, re-positioning the clips, and tightening their knobs.

To re-position the panel at a different height, remove the panel. Lift the shelf assembly off and hang it on the other cross-piece. Replace the panel and attachment clips. You may need to re-locate the clips to their other holes on the sides of the legs.

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make operation unsafe.

Cleaning

The whiteboard can be cleaned using a soft dry cloth.

If the ink has been left on for a long time, rub clean with a dry cloth and then use a cleaner recommended by the supplier of your whiteboard markers or a non-abrasive general purpose cleaner. Stubborn stains may need some extra effort to remove completely. Wipe off residual paint with warm water.

Do not immerse whiteboards in water.

Abrasive cleaning agents will damage the whiteboard surface.

Steel magnets may scratch the whiteboard.

Construction

The whiteboards are steel with a foam core.

Packaging Recycling

Please help us preserve the earth for the children and recycle at an appropriate facility.

All our packaging is recyclable in two simple categories:

Packaging Materials	Recycling Category
Cardboard boxes and pads, newsprint	corrugated cardboard
Plastic wrap, sheet foam, foam pads	Plastic #4 LDPE

User Modifications

We are not responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed.

Use only replacement parts supplied by Community Playthings.