

# Product Guide

## User and Maintenance Information

**Important Information:** Please save this product guide.

## Customer Service:

### United States

PO Box 2  
Ulster Park, NY 12487  
Office hours: 9-5 EST  
Phone (800) 777-4244  
Fax (800) 336-5948  
(845) 572-3468

www.CommunityPlaythings.com  
Sales@CommunityPlaythings.com



## W323 Outlast Crate W333 Shallow Crate

### Recommended Use

Outlast Crates are intended as outdoor, open ended playthings for children ages two and older as well as for storage of toys and materials. Use crates on their own or in combination with Outlast Blocks, made on the same module. Crates can be stacked for storage.

Outlast Crates fit neatly into W301 Outlast Shed, 3 wide on top shelf and 2 lengthwise on second shelf, for out-of-the-weather storage of materials.

### ⚠ WARNING

- ▲ This product is intended for use by children of immature judgment and therefore adult supervision is required at all times.
- ▲ When Crate is used on shelf within reach of children beware of overloading.

### ⚠ CAUTION

- ▲ Do not stack crates more than 3 high.
- ▲ Do not climb on stacked crates.
- ▲ Outlast Crates and Shallow Crates are part of an open-ended, large muscle play system. Children can place these products in combination with other objects to create an injury hazard.
- ▲ To prevent injury, caregivers and staff must familiarize themselves with these materials before giving children access to them.

### Assembly

If your shipment is incomplete, please call Customer Service.

### Maintenance

Acetylated wood weathers a natural silver-grey if left untreated, outdoors. If you prefer the original look, scrub with a bleach or detergent solution. When dry, apply a tinted, nontoxic penetrating stain, then apply a nontoxic mildewcide to minimize mildew growth.

Periodically inspect for splinters, broken or loose parts, and/or malfunctions. Remove from service when any condition develops that might make operation unsafe.

### Construction

The wooden components are manufactured from long lasting acetylated wood and finished with a tinted nontoxic stain. All edges and corners are rounded for safety and ease of cleaning.

Stainless steel hardware is used throughout and plastic components are formulated to ensure long life in outdoor environments.

### Cleaning

Mud and dirt can be removed with scrub brush and water. Over time in outdoor settings surface may blacken with mildew. A bleach solution or safe detergent can be used to remove blackness.

### User Modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

### Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID code from the product.

**Use only replacement parts supplied by Community Playthings.**

