

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION: Please save this product guide.

CUSTOMER SERVICE:

United States

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

Sales@CommunityPlaythings.com



P53 High Chair

IMPORTANT! KEEP FOR FUTURE REFERENCE

Recommended Use

The High Chair is designed to be used only by children capable of sitting upright unassisted, and is recommended for children age six months to two years.

⚠ WARNING

- ▲ Prevent serious injury or death from falls or sliding out of High Chair.
- ▲ Always secure child in the restraint.
- ▲ Always keep child in view while in High Chair.
- ▲ Never leave child unattended.
- ▲ Seat belts are not intended for behavior management but for the safety of the user. Seat belts must be carefully adjusted for the comfort and security of the user and can never take the place of the caregiver. Use of seat belts must be closely supervised.
- ▲ This product is intended for use by children of immature judgement. Therefore adult supervision is required at all times.
- ▲ The child should be secured in the High Chair at all times by the restraining system. The tray is not designed to hold the child in the Chair. It is recommended that the High Chair is used only by children capable of sitting upright unassisted.

⚠ CAUTION

- ▲ For indoor use only. The High Chair is not waterproof.

Assembly

The carton you received contains:

1. One High Chair with seat belt and head pad attached.

2. One tray.
3. This product guide.

To assemble the Chair slide the tray onto the arms of the Chair until both latches go into the desired holes in the armrests.

If your shipment is incomplete, please call Customer Service.

Accessories

P531 High Chair Footrest

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make operation unsafe.

Operation

The Head Pad is fastened to the chair with overlapping flaps through the handhold.

The flaps are secured to each other by a snap. To remove for cleaning open the snap and pull pad off top of chair back.

When the High Chair is not in use, latch the tray in the set of holes closest to the back. This is the position for safe storage.

Place the child in the Chair with legs astride the seat post. The seat belt provided (See Figure A) must be fastened snugly around the child's waist so that the child remains in the proper position during feeding time. If the seat belt is loose, it may be tightened by pulling on either loop.



Figure A

P53 High Chair

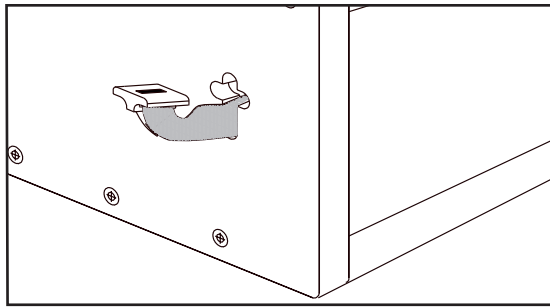


Figure B

Belts may be removed for cleaning. (See Figure B) To replace the belt, slide tab all the way through the T-Slot and pull back so it sits flat. Be sure to replace seat belt properly after cleaning.

Cleaning

Wipe wood with a damp cloth and a mild detergent or disinfectant. Do not use excessive water. Clean the plastic tray with mild soap or detergent. Avoid abrasive cleaners, aromatic spirits, and cleaning solutions containing pine oil (such as Lysol®) for cleaning. This can cause the plastic to weaken and crack. Belts may be removed and washed in washing machines or dishwashers. Be sure to replace belt properly if removed for cleaning. Clean Head Pad with a damp cloth and a mild detergent (or a mild disinfectant).

⚠ Do not use rinse cycles in excess of 165° when washing Tray or adhesive may fail.

Construction

The wooden components are manufactured from solid maple, finished with a clear nontoxic finish. All edges and corners are rounded for safety and ease of cleaning.

The safety restraints (belts) are made of polypropylene webbing and the locking buckles are made of a tough polymer.

Head Pad is made with urethane foam padding.

The tray is of durable ABS plastic.

User Modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.

CUSTOMER SERVICE:

United States

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

Sales@CommunityPlaythings.com

