

Product Guide

User and Maintenance Information

Important Information:
Please save this product guide.

J925, J926 Bench Glider Cover

Recommended Use

Easily removable and washable, these denim Covers will protect your Bench Glider armrests and back from stains and spills. While one set is in use on your Bench Glider, the other set can be laundered.

▲ WARNING

- ▲ Keep nearby children under supervision at all times.
- ▲ This accessory is intended for use on the J920/J921/J930/J931 Community Bench Glider only.

Assembly

The carton contains: Two back covers and four arm covers. There is no right and left or back and front to your Bench Glider Covers. Simply snap them over the back and over the armrests of your Glider.

If your shipment is incomplete, please call Customer Service.

Maintenance

Periodically inspect for signs of wear and/or missing parts. Remove the product from service when any condition develops that might make it unsafe.

Cleaning

Machine wash—warm, gentle cycle


Tumble dry—low heat

Construction

The Bench Glider Cover is made of durable, 100% cotton denim.

User Modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing, or evaluation.

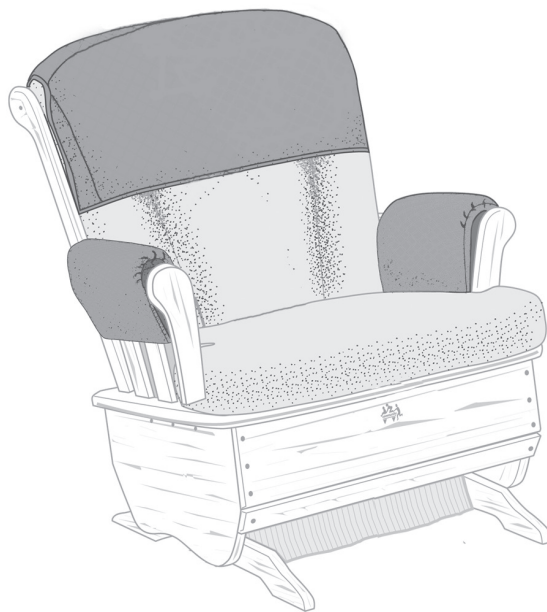

Customer Service:

United States

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

Sales@CommunityPlaythings.com

