

# Product Guide

User and Maintenance Information

## IMPORTANT INFORMATION:

Please save this product guide.

A910, A911, A912 **22 x 30 MultiTable**  
A914, A915, A916 **22 x 44 MultiTable**  
A918, A919, A920 **Trapezoidal MultiTable**  
A938, A939, A940 **36 Round MultiTable**  
A950, A951, A952 **30 x 44 MultiTable**  
A958, A959, A960 **30 x 30 MultiTable**

## Recommended Use

Our rugged MultiTables are lightweight, stackable, and modular. Quick, tool-free height adjustment makes these attractive tables a versatile addition to any classroom.

### ⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ Do not sit or stand on table.
- ▲ This table will be unstable if the legs are not installed according to directions.
- ▲ The table top should be empty when making adjustments to the table legs.

### ⚠ CAUTION

- ▲ For indoor use only. The MultiTable is not waterproof.

## Assembly

This carton contains one table top. Adjustable legs ship separately.

**If your shipment is incomplete, please contact Customer Service.**

For each leg:

1. Insert leg into socket.
2. Rotate leg clockwise until it is completely tightened into socket. Use both hands to tighten.
3. Stand the table on its legs. If it wobbles, check that the legs are fully inserted into the sockets and adjusted to equal height.



Figure A

## Operation (See Figure A)

Tables, except the Round Table, can be spiral stacked up to three high. To stack tables more than three high, table legs must be removed and stored in the leg holder provided under the table top.

To adjust your table to a higher position, pull wooden leg out from the plastic sleeve until it locks at the desired height.

To lower your table height, lift the table and push the adjustment ring on the leg down. Holding the ring down, push wooden leg up until it locks at the desired leg height.

## CUSTOMER SERVICE:

### United States

PO Box 2  
Ulster Park, NY 12487  
Office hours: 9-5 EST  
Phone (800) 777-4244  
Fax (800) 336-5948  
(845) 572-3468

www.CommunityPlaythings.com  
Sales@CommunityPlaythings.com



## Maintenance Information

A910, A911, A912

### **22 x 30 MultiTable**

A914, A915, A916

### **22 x 44 MultiTable**

A918, A919, A920

### **Trapezoidal MultiTable**

A938, A939, A940

### **36 Round MultiTable**

A950, A951, A952

### **30 x 44 MultiTable**

A958, A959, A960

### **30 x 30 MultiTable**

#### **CUSTOMER SERVICE:**

##### **United States**

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

[www.CommunityPlaythings.com](http://www.CommunityPlaythings.com)

[Sales@CommunityPlaythings.com](mailto:Sales@CommunityPlaythings.com)



### **Maintenance**

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make operation unsafe.

### **Cleaning**

Wash the table surface with mild dishwashing liquid or powdered detergent and warm water, using a soft cloth. Rinse with warm water, and dry with a soft cloth.

For more stubborn spots, use an all-purpose household cleaner such as Formula 409®, Windex® or Lestoil®. Follow manufacturers directions.

Stains may be removed with undiluted Clorox® (protect your skin), by letting this bleach stand NO MORE THAN 1½ MINUTES. Rinse thoroughly with warm water. Repeat if necessary.

Mr. Clean® Magic Eraser can be used to remove difficult marks on the table surface.

### **Construction**

Tops are of durable ¾" Birch Plywood, surfaced with long-wearing pressure-laminated plastic in maple grain design. Plastic Sockets are constructed from durable plastic.

### **Leg Sizes Available:**

A932 - set of four 12-16" Table Legs

A934 - set of four 16-24" Table Legs

A936 - set of four 20-30" Table Legs

### **User Modifications**

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

### **Ordering Parts**

To order replacement parts, contact Customer Service with a description of the part(s) needed and the serial number of the product.

### **Use only replacement parts supplied by Community Playthings.**