Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:

Please save this product guide.

A801 Work Table
A805 Childsize Table
A811 Activity Table
A815 Nursery Table
A821 Round Table 48
A825 Round Table 36
A831 Round Table 30
A835 Half Circle Table 64
A841 Half Circle Table 76
A845 Quarter Circle Table
A851 Trapezoidal Table
A855 Half Moon Table

Recommended Use

Indoor classroom table

A WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ Do not sit or stand on table.
- ▲ This table will be unstable if legs are not installed according to directions.
- ▲ This table must be empty while making adjustments to the legs.

A CAUTION

- ▲ For indoor use on level surface only.
- ▲ This table is not waterproof.
- ▲ This table is *not* stackable

Assembly

This product comes in two cartons:

- 1. This carton contains one table top and this product guide.
- 2. The second carton contains table legs, and instructions for assembly.

If your shipment is incomplete, please call Customer Service.

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make operation unsafe.

Cleaning

Wash the table surface with mild dishwashing liquid or powdered detergent and warm water, using a soft cloth. Rinse with warm water, and dry with a soft cloth.

For more stubborn spots, use an all-purpose household cleaner such as Formula 409®, Windex® or Lestoil®. Follow manufacturers directions.

For even more stubborn spots, use mild Lava® soap, rubbing gently.

Stains may be removed with undiluted Clorox® (protect your skin), by letting this bleach stand NO MORE THAN 1 ½ MINUTES. Rinse thoroughly with warm water. Repeat if necessary

Construction

Table tops are constructed with a high-density particleboard core and top grade laminate on both sides for maximum structural stability.

Plastic Sockets are constructed from polypropylene.

User Modifications

We are not responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.



www.CommunityPlaythings.com

Sales@CommunityPlaythings.com

CUSTOMER SERVICE:

Ulster Park, NY 12487

Office hours: 9-5 EST

Fax (800) 336-5948

(845) 572-3468

Phone (800) 777-4244

United States

PO Box 2

© 2005 by Community Products, LLC AD31 D6710 Revision D