

# Product Guide

## User and Maintenance Information

**Important Information:** Please save this product guide.

### Customer Service:

#### United States

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

[www.CommunityPlaythings.com](http://www.CommunityPlaythings.com)

[Sales@CommunityPlaythings.com](mailto:Sales@CommunityPlaythings.com)



## W456 Outlast Classic Counter 22" W457 Outlast Classic Sink 22"

### Recommended Use

The Outlast Classic Mud Kitchen provides a setting for open ended outdoor dramatic play. The Classic Sink provides a contained play area. The attached backsplash helps define the play space and doubles as a storage surface.

Outlast Scoops clip handily onto the backsplash. The sturdy non-removable sink has a contoured basin and large drain to allow it to empty completely. The rubber Plug is permanently attached.

### ⚠ WARNING

- ▲ This product is intended for use by children of immature judgement. Supervision is required at all times.
- ▲ Water is a drowning hazard. Do not leave sink of water unattended.

### ⚠ CAUTION

- ▲ Adults are responsible to prevent Outlast Mud Kitchen items from being employed by children in unsafe combinations with other components. Make sure the shelf is sitting securely on the floor.

### Assembly

Your Outlast Classic Mud Kitchen item comes fully assembled and ready to use. Classic Counter includes 1 Crate and 4 Nature Trays. Classic Sink includes 1 Crate, 2 Nature Trays, and 3 Kitchen Scoops.

### Accessories

Nature Tray - small tray that can be used for handy storage or loose parts play.

Kitchen Scoop Set - sturdy plastic scoops that can clip to back of sink or Crates.

### Maintenance

Acetylated wood weathers a natural silver grey if left untreated outdoors. If you prefer the original look, scrub with a bleach or detergent solution. When dry, apply a tinted, nontoxic penetrating stain, then apply a nontoxic mildewcide to minimize mildew growth.

Periodically inspect for splinters, broken or loose parts, and/or malfunctions. Remove from service when any condition develops that might make operation unsafe.

### Cleaning

Mud and dirt can be removed with scrub brush and water. Over time outdoors, surfaces may blacken with mildew. Remove with detergent or a bleach solution.

### Construction

The wooden components are manufactured from long lasting acetylated wood and finished with a water based stain. All edges and corners are rounded for safety and ease of cleaning.

End grain is protected by plastic guards. Stainless steel hardware is used throughout and plastic components are formulated to ensure long life in outdoor environments.

### User Modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

### Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

**Use only replacement parts supplied by Community Playthings.**

**If your shipment is incomplete, please call Customer Service.**

