

Product Guide

User and Maintenance Information

Important Information:
Please save this product guide.

H831, H832, H833 Bulletin Board

Recommended Use

Your bulletin boards can be mounted horizontally or vertically. Each bulletin board comes with an easy to mount clear cover allowing for protected displaying of children's work.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.

⚠ CAUTION

- ▲ When placing the clear cover on the bulletin board make sure that the ends of the cover are in the slots and that the Velcro® is fully in contact with the backing.

Assembly

Mounting Bulletin Boards on the wall requires professional skill and should be done by a competent carpenter or maintenance person. Your bulletin board can be mounted vertically or horizontally with the community playthings logo positioned at the top. Your carton will contain:

- 1) A bulletin board with clear cover.
- 2) 4 L shaped brackets for wall mounting.
- 3) A complimentary pack of Velcro® dots.

Community Playthings is not a supplier of Velcro® dots. Visit a local office supply store for replacements.

If your shipment is incomplete, please call Customer Service.

Maintenance

Periodically inspect for secure connections, cracks, breaks, loose parts, missing parts and/or malfunctioning parts. Remove the product from service when any condition develops that might make operation unsafe.

Construction

Your bulletin board is constructed with a solid maple frame, protected with a clear nontoxic finish. The bulletin panel is a nylon loop fabric, laminated to a durable plastic pinboard. The clear cover is a tough plastic with rounded corners.

Cleaning

The wooden parts can be wiped with a damp cloth with mild detergent. Do not use excessive water.

The clear cover may be dusted with a soft damp cloth or chamois. Do not use abrasive cleaners.

The loop fabric pinboard can be cleaned with a common household detergent. If there are stubborn stains try shampooing them with household upholstery cleaner..

User Modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.

Customer Service:

United States

PO Box 2
Ulster Park, NY 12487
Office hours: 9-5 EST
Phone (800) 777-4244
Fax (800) 336-5948
(845) 572-3468

www.CommunityPlaythings.com
Sales@CommunityPlaythings.com



Figure A

Operation

Removing Clear Cover:
Pull firmly on cutouts at edges of clear cover.

Replacing Clear Cover:
Insert short ends of clear cover into slots and press down on Velcro® from center outward. (See caution)

