Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:

Please save this product guide.

Solid Maple Legs for Community Table System

Recommended Use

To be installed on Community Playthings table or desk top as per directions below.

A WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ This table will be unstable if legs are not installed according to directions.

A CAUTION

▲ For indoor use on level surface only.

Assembly

This carton contains the legs for your table and this product guide, which includes directions for assembly. The model number on the carton corresponds to the set of legs you selected from the catalog:

MODEL	LEG SET
A881	12" Table Height, 4 legs
A882	14" Table Height, 4 legs
A883	16" Table Height, 4 legs
A884	18" Table Height, 4 legs
A885	20" Table Height, 4 legs
A886	22" Table Height, 4 legs
A887	24" Table Height, 4 legs
A888	26" Table Height, 4 legs
A861	28" Table Height, 4 legs
A862	30" Table Height, 4 legs

If your shipment is incomplete, please call Customer Service.

Follow the instructions below for each leg:

- 1. Insert leg into plastic socket.
- 2. Rotate leg clockwise until it is completely tightened into socket. Use both hands to tighten.
- 3. When all legs are installed, stand the table on its legs. If table wobbles, check that the legs are fully inserted into the sockets.

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make operation unsafe.

Cleaning

Wash with mild dishwashing liquid or powdered detergent and warm water, using a soft cloth. Rinse with warm water, and dry with a soft cloth.

Construction

Table Legs are solid maple covered with a clear wood finish.

Plastic parts are constructed from durable polypropylene.

User Modifications

We are not responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.

CUSTOMER SERVICE:

United States

PO Box 2 Ulster Park, NY 12487 Office hours: 9-5 EST Phone (800) 777-4244 Fax (800) 336-5948 (845) 572-3468

www.CommunityPlaythings.com Sales@CommunityPlaythings.com

