

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:

Please save this product guide.

W420/W425/W430/W435 Outlast Water Play Combo W422/W423/W432/W433 Outlast Water Table

Recommended Use

The Outlast Water Tables support outdoor sand and water play and provide built-in storage. Pans neatly contain wet materials but can also be used with sand or natural loose parts. Tough waterproof lids tidily cover pans when not in use. The wide, smooth space around the pan creates a work surface. The shelf provides a convenient space for storage. The table is stable and durable, allowing it to be used almost anywhere outdoors, e.g. patio, sandbox, messy area.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ Water is a drowning hazard. Do not leave pan of water unattended.

⚠ CAUTION

- ▲ Adults are responsible to prevent Outlast Water Tables from being employed by children in unsafe combinations with other components.

Assembly

Your Outlast Water Table ships in two cartons and requires some assembly. Cartons contain:

- 1 Four legs with hardware to attach and Instruction Sheet for Table assembly.
- 2 Table with pan(s) and lid(s).

Water Play Combo set also includes Crate(s) and Flow Pan(s).

If your shipment is incomplete, please call Customer Service.

Accessories

Two lengths of legs are available.

Outlast Flow Pan adds an extra level and water flow possibilities.

Crates provide convenient storage and come in two sizes (full size Outlast Crate for 24" table only).

Maintenance

Acetylated wood weathers a natural silver grey if left untreated outdoors.

If you prefer the original look, scrub with a bleach or detergent solution. When dry, apply a tinted, nontoxic penetrating stain, then apply a nontoxic mildewcide to minimize mildew growth.

Periodically inspect for splinters, broken or loose parts, and/or malfunctions. Remove from service when any condition develops that might make operation unsafe.

Cleaning

Mud and dirt can be removed with scrub brush and water. Over time outdoors, surfaces may blacken with mildew. Remove with detergent or a bleach solution.

Construction

The wooden components are manufactured from long lasting acetylated wood and finished with a water based stain. All edges and corners are rounded for safety and ease of cleaning.

End grain is protected by plastic guards. Stainless steel hardware is used throughout and plastic components are formulated to ensure long life in outdoor environments.

User Modifications

We are not responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.

CUSTOMER SERVICE:

United States

PO Box 2
Ulster Park, NY 12487
Office hours: 9-5 EST
Phone (800) 777-4244
Fax (800) 336-5948
(845) 572-3468

www.CommunityPlaythings.com
Sales@CommunityPlaythings.com

