Product Guide

User and Maintenance Information

> Important Information: Please save this product guide.

J439 Seatbelt for Childshape Chairs & Mealtime Chairs

Recommended Use

The J439 Seatbelt is designed as an accessory for Community's line of Childshape Chairs and Mealtime Chairs.

A WARNING

- This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ Seat belts are not intended for behavior management but for the safety of the user. Seat belts must be carefully adjusted for the comfort and security of the user and can never take the place of the caregiver. Use of seat belts must be closely supervised.
- This accessory is intended for use on the following Community Playthings Products only: J408, J410, J412, J421, J422, J423, J424, J441, J442, J443, J444. J206, J208, J210, J212, J806, J807, J808, J809, J810, and J811.

Assembly

Your belt comes in one carton ready to fasten to your chair. Inside are:

- 1 The J439 seatbelt.
- 2 This information sheet.

If your shipment is incomplete, please contact Customer Service.

Operation

To attach seatbelt, thread buckle up through gap at back of seat and push clips into indentations on back.

Correct installation of the belts is essential for reliable service. Please double check your work. Before placing the product into service give a firm pull on each side of the belt to be sure it is secure.

Maintenance

Periodically inspect for loose threads, broken components, and/or malfunctions. Remove the product from service when any condition develops that might make operation unsafe.

Cleaning

Seat belt is removable and machine washable.

Construction

Seatbelt is made of sturdy polypropylene webbing and the locking buckle and attachment clips are made of durable plastic.

User Modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.



Figure A

Customer Service: United States

PO Box 2 Ulster Park, NY 12487 Office hours: 9-5 EST Phone (800) 777-4244 Fax (800) 336-5948 (845) 572-3468 www.CommunityPlaythings.com Sales@CommunityPlaythings.com



© 2004 by Community Products, LLC TD49 DC 6594 Revision G