

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:
Please save this product guide.

CUSTOMER SERVICE:

United States

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

Sales@CommunityPlaythings.com



H540 Set of Ten Magnets

Recommended Use

Magnets provided for use in conjunction with Community Playthings magnetic whiteboard, on the Multi-Purpose Easel and the Art Island.

⚠ WARNING

This product is intended for use by children of immature judgement. Supervision is required at all times.

Maintenance:

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. The housing of the magnets may crack if they are dropped repeatedly. Remove the product from service when any condition develops that might make operation unsafe.

Cleaning

Wipe magnets with damp cloth.

Ordering Parts

To order replacement magnets, contact Customer Service.

Use only replacement parts supplied by Community Playthings.