

Product Guide

User and Maintenance Information

Important Information: Please save this product guide.

Customer Service:

United States
PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

Sales@CommunityPlaythings.com



W305, W310, W335 Outlast Blocks

Recommended Use

The Outlast Blocks are intended to support outdoor, active and cooperative play for children ages three and older. Blocks are designed for use on any level surface including grass, dirt or even pavement. Outlast Blocks store neatly at the point of play in the Outlast Shed and can be transported by children in the Outlast Wheelbarrow. The Ramps enhance the play value of Outlast Blocks and can be used in water play. They come in two sizes and are compatible with Outlast Blocks and Flow Pans. Knob and button connection allows for many useful and creative structures including a balancing beam, bench, picnic table, car or boat; limited only by your children's imagination.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment and therefore adult supervision is required at all times.
- ▲ Children should not build structures above their shoulder height.
- ▲ Beware of unsafe block structures.

⚠ CAUTION

- ▲ Long Blocks and Planks are heavy. Encourage cooperation to prevent injury.
- ▲ The Outlast Blocks are part of an open-ended, large muscle play system. Children can place this product in combination with other objects to create an injury hazard.
- ▲ To prevent injury, caregivers and staff must familiarize themselves with these materials before giving children access to them.

Assembly

Use the table to determine if your shipment is complete:

Included:	W335	W310	W305
Cubes	8	8	4
Short Blocks	8	8	4
Medium Blocks	10	8	4
Long Blocks	4	—	—
5½" Planks	8	8	4
11" Planks	4	4	2
16½" Planks	2	2	1
22" Planks	8	8	4
44" Planks	6	—	—
Steering Wheels	4	4	2
11" Ramps	2	2	1
22" Ramps	4	2	1
Total Pieces	68	54	27

Maintenance

Acetylated wood weathers a natural silver-grey if left untreated, outdoors. If you prefer the original look, scrub with a bleach or detergent solution. When dry, apply a tinted, nontoxic penetrating stain, then apply a nontoxic mildewcide to minimize mildew growth.

Periodically inspect for splinters, broken or loose parts, and/or malfunctions. Remove from service when any condition develops that might make operation unsafe.

Construction

The wooden components are manufactured from long lasting acetylated wood and finished with a tinted nontoxic stain. All edges and corners are rounded for safety and ease of cleaning.

Stainless steel hardware is used throughout and plastic components are formulated to ensure long life in outdoor environments.

Cleaning

Mud and dirt can be removed with scrub brush and water. Over time in outdoor settings surface may blacken with mildew. A bleach solution or safe detergent can be used to remove blackness.

User Modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.

