

# Product Guide

## User and Maintenance Information

**Important Information:**  
Keep instructions for future use.

## Customer Service:

### United States

PO Box 2  
Ulster Park, NY 12487  
Office hours: 9-5 EST  
Phone (800) 777-4244  
Fax (800) 336-5948  
(845) 572-3468

www.CommunityPlaythings.com  
Sales@CommunityPlaythings.com



## F471 Adjustable Security Gate F472 Adjustable Gateway F473 Adjustable Wall Anchor

### Recommended Use

The gates are a secure barrier to small children while allowing easy access for adults. The Adjustable Gateway provides full sized ADA width access and an ADA threshold. The Adjustable Security Gate is intended to secure spaces that do not need full access, such as closets, changing areas, etc. The Adjustable Wall Anchor is a flexible gap filler that fastens to the wall and connects to Roomscapes at its free end.

### ⚠ WARNING

- ▲ To prevent serious injury or death, securely install gate or enclosure and use according to manufacturer's instructions.
- ▲ Never use with a child able to climb over or dislodge the gate or enclosure.
- ▲ Never leave children unattended.

### ⚠ CAUTION

- ▲ All gates should be attached at both ends to a wall or furniture by Roomscapes Posts 32" or longer. Use Wall Adapters where needed.
- ▲ Roomscapes shelves and panels attached to gates must be at least 24" high.
- ▲ Roomscapes shelves attached to gates must be at least 3' long or connected at 45° or 90° to the gate threshold.
- ▲ Panels must connect at 45° or 90° to the gate threshold.
- ▲ Adjustable Wall Anchor must be screwed to wall by a competent carpenter. Fasteners not included. You must select hardware appropriate for the building's construction.
- ▲ Do not employ the Adjustable Wall Anchor next to the tall Roomscapes Entry or Teacher Arch.

### Assembly

To connect the couplings to Roomscapes, slide Roomscapes posts down entire length of couplings. (See the Roomscapes product guide.)

If your shipment is incomplete, please call Customer Service.

### Operation

The gate swings 180° both ways. The child-proof latch is operated by simultaneously squeezing the hand-hold above and trigger below. To close the gate, push it shut. No operation of the trigger is necessary for latching.

The adjustable wings on the adjustable gates can be repositioned by snapping open the three locking handles at the top of the wing. Adjust the wing to the desired position and snap the locks down to lock the assembly in place. If the lock does not tighten, turn it one full turn clockwise and try again. Repeat until the lock snaps tightly into place.

Note on F472 Adjustable Gateway setup: For best results, angle the adjustable wing on the hinge side of the gate at a 90° angle or less as shown. Extending the wing out straight may result in the gate touching the ground when fully opened.



Two rubber strips are adhered to the bottom of the threshold to help keep the gate in place on the floor. The grip of the rubber can be restored by cleaning the strips with a wet rag.

### Maintenance

The latch and hinges are engineered to never need lubrication. Periodically inspect for secure connections, cracks, breaks, loose parts, missing parts, and/or malfunctions. Check Posts to be sure that all child-proof lock rings are engaged and working. Remove the product from service when any condition develops that might make operation unsafe.



# Product Guide

## User and Maintenance Information

**Important Information:**  
Keep instructions for future use.

### Construction

Gates are made from solid maple, finished with a durable clear wood finish. Gate panel joints are glued mortise and tenon, pinned with a screw. Threshold is powder coated aluminum with rubber strips underneath. Hinges and latches are made from durable, engineered plastic.



### Cleaning

Wooden Parts: Wipe with a damp cloth and mild detergent. Do not use excessive water. For all plastic parts and threshold, including rubber strips on bottom: dust with a soft, damp cloth or chamois. Wash with dishwashing detergent and plenty of lukewarm water.

### Packaging Recycling

Please help us preserve the earth for the children and recycle at an appropriate facility.

All our packaging is recyclable in two simple categories:

Packaging Materials	Recycling Category
Cardboard boxes and pads, newsprint	corrugated cardboard
Plastic wrap, sheet foam, foam pads	Plastic #4 LDPE

### Customer Service:

#### United States

PO Box 2  
Ulster Park, NY 12487  
Office hours: 9-5 EST  
Phone (800) 777-4244  
Fax (800) 336-5948  
(845) 572-3468

[www.CommunityPlaythings.com](http://www.CommunityPlaythings.com)  
[Sales@CommunityPlaythings.com](mailto:Sales@CommunityPlaythings.com)



### User Modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

### Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID code from the product.

**Use only replacement parts supplied by Community Playthings.**