

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:
Please save this product guide.

Recommended Use

To be installed on Community Playthings Table or Desk top as per directions below.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ Your table will be unstable if legs are not installed according to directions.
- ▲ The table must be empty when making adjustments to the legs.

⚠ CAUTION

- ▲ For indoor use on level surface only.

Assembly

This carton contains the legs for your table and the product guide, which includes directions for assembly.

Adjustable legs are available in three ranges of height adjustment.

The model number on the carton corresponds to the set of legs you selected from the catalog.

If your shipment is incomplete, please call Customer Service.

Follow the steps below for each leg:

1. Insert leg into plastic socket.
2. Rotate leg clockwise until completely tightened into socket. Use both hands to tighten.
3. When all legs are installed, position table on its legs.
4. If table wobbles, check that legs are fully inserted into the sockets and adjusted to equal height.

NOTICE: Due to greater thickness of the tops of the Classroom Tables and Desks, each increment of adjustment is one inch more than the MultiTable, as described in the chart.

Adjustable Legs for Community Table System

Adjustments

To raise your table to a higher position, pull wooden leg out from the plastic sleeve until it locks at the desired height. (See Fig. B)

To lower your table height, lift the table and push the adjustment ring on the leg down. Holding the ring down, push wooden leg up until it locks at the desired leg height.

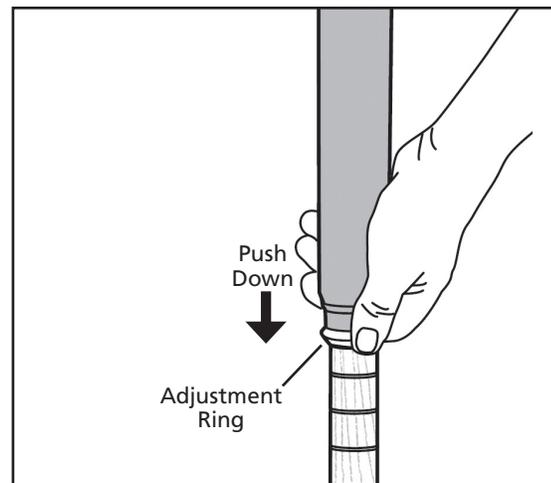


Figure B

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make operation unsafe.

Cleaning

Wash with mild dishwashing liquid or powdered detergent and warm water, using a soft cloth. Rinse with warm water, and dry with a soft cloth.

CUSTOMER SERVICE:

United States

PO Box 2
Ulster Park, NY 12487
Office hours: 9-5 EST
Phone (800) 777-4244
Fax (800) 336-5948
(845) 572-3468

www.CommunityPlaythings.com
Sales@CommunityPlaythings.com



MODEL NUMBER	CLASSROOM TABLE/DESK HEIGHT	MULTITABLE HEIGHT
A932 set of 4 Legs	Low 13-17" (33-43 cm)	12-16" (30-41 cm)
A934 set of 4 Legs	Medium 17-25" (43-63 cm)	16-24" (41-61 cm)
A936 set of 4 Legs	High 21-31" (53-79 cm)	20-30" (51-76 cm)
A992 set of 5 Legs	Low 13-17" (33-43 cm)	12-16" (30-41 cm)
A994 set of 5 Legs	Medium 17-25" (43-63 cm)	16-24" (41-61 cm)
A996 set of 5 Legs	High 21-31" (53-79 cm)	20-30" (51-76 cm)

Page 2

User and Maintenance Information (cont'd)

Adjustable Legs for Community Table System

Construction

Adjustable legs are solid maple extensions telescoping from rigid aluminum sleeves.

Plastic parts are constructed from durable polypropylene.

User Modifications

We are not responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

**Use only replacement parts supplied by
Community Playthings.**

CUSTOMER SERVICE:

United States

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

Sales@CommunityPlaythings.com

