

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:

Please save this product guide.

CUSTOMER SERVICE:

United States

PO Box 2
Ulster Park, NY 12487
Office hours: 9-5 EST
Phone (800) 777-4244
Fax (800) 336-5948
(845) 572-3468

www.CommunityPlaythings.com
Sales@CommunityPlaythings.com



Toddler Village

M801/C901 **Toddler Stove**

M802/C902 **Toddler Sink**

M803/C903 **Toddler Fridge**

M804/C904 **Village Square**

M806/C906 **Village Corner**

M807/C907 **Toddler Shelf**

M808/C908 **Toddler Dress-Up Unit**

C912 **Riser Square**

C913 **Riser Rectangle**

C914 **Riser Ramp**

C916 **Riser Quarter Circle**

C917 **Riser Curve**

Recommended Use

Toddlers are always on the move. The Toddler Village meets their large muscle and dramatic play needs simultaneously by combining the traditional kitchen with carpeted Risers. Cozy corners and loose parts add opportunities for developmentally appropriate play. Units engage with childproof connectors for stability under active play. For ages 12 to 36 months.

⚠ WARNING

- ▲ This product is for use by children of immature judgment, therefore supervision is required at all times.

⚠ CAUTION:

- ▲ For indoor use only. These products are not waterproof.

If your shipment is incomplete, please contact Customer Service.

Connection

The Toddler Village units come with a Connector (Fig. A) that will prevent rearranging of the units by children, and enhance stability. Configuration of the Toddler Village should be done by an adult. The Connector has an automatic "childproof" button to discourage tampering by children.

- Use Connectors to join Furniture Units together.
- Use Connectors to join Riser units together.
- The Steering Wheel may be connected to either the Furniture or the Risers.
- The Canopy must be connected on both ends to Furniture using Connectors.
- When assembling sections of Risers to be used as a stage, assemble the configuration upside down in order to access the connecting slots. When the configuration is complete, turn the assembly over, using an assistant.



Figure A: Toddler Village Connector

⚠ CAUTION:

- ▲ The Risers should not be connected to the Furniture as unstable conditions may result.

Accessories

C919 Chute: Mounts on fuzzy back or can be used separately.

Connector

G485 Toddler Basket

C909/M809 Toddler Canopy, Pattern

C918 Steering Wheel

C921 Small Mirror

F846 Panel Cover, Mirror

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove product from service when any condition develops that might make operation unsafe.

Cleaning

Wooden Parts: wipe with a damp cloth and mild detergent. Too much water will harm the finish of the wood. Dry the wood components after cleaning.

Carpets are removable for cleaning or replacement.

All clear plastic parts and mirror cover: Dust with a soft, damp cloth. Wash with dishwashing detergent and plenty of lukewarm water. Use a clean soft cloth, applying only light pressure. Rinse with clear water and dry.

⚠ CAUTION:

- ▲ Do not use window cleaning sprays or abrasive cleaners.

Canopy: The fabric of the canopy can be washed with mild soap or detergent and water.

Loop fabric on backs: remove stains with a common household detergent. Stubborn stains may be removed by shampooing with household upholstery cleaner.

Baskets are machine washable.

Construction:

The wooden components are manufactured of durable solid hardwood or plywood with a clear nontoxic finish.

The backs are nylon loop fabric, laminated to a durable plastic backing.

Clear tube and mirrors are PETG.

Baskets are made of polypropylene.

Packaging Recycling

All our packaging is recyclable in two simple categories:

Please help us preserve the earth for the children and recycle at an appropriate facility.

Packaging Materials	Recycling Category
Cardboard boxes and pads, newsprint	corrugated cardboard
Plastic wrap, sheet foam, foam pads	Plastic #4 LDPE

User Modifications:

We are not responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and ID Code from the product.

Use only replacement parts supplied by Community Playthings.

CUSTOMER SERVICE:

United States

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

Sales@CommunityPlaythings.com

