

# Product Guide

User and  
Maintenance  
Information

## IMPORTANT INFORMATION:

Please save this  
product guide.

## CUSTOMER SERVICE:

### United States

PO Box 2  
Ulster Park, NY 12487  
Office hours: 9-5 EST  
Phone (800) 777-4244  
Fax (800) 336-5948  
(845) 572-3468

www.CommunityPlaythings.com  
Sales@CommunityPlaythings.com



## W503 Outlast Easel Island



## Recommended Use

The Outlast Easel Island is a free-standing portable art studio designed to support individual or collaborative art activities for multiple children at once. Attach paper or other art substrates using the adjustable clip rails. Sturdy supply trays clip onto the aluminum rail at the base of each panel to hold art supplies.

## ⚠ WARNING

Tip-over hazard.

- ▲ Install Easel Island on level ground to avoid tipping.
- ▲ Secure item to the ground if winds over 40 mph are expected.
- ▲ Do not climb on item.
- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.

## Assembly

This product ships in one carton containing:

- Four easel panel assemblies
- Four plastic top caps
- Four supply trays

With the clip rails oriented to the outside, locate the base of the left post into the plastic foot of the corresponding right post. Slide the top cap over both posts until the hook snaps into place. Repeat process for all four panels.

Product is designed to withstand winds up to 40 mph without being anchored to the ground. If gusts over 40 mph are common in your area, secure product to the ground by installing standard landscaping spikes through the holes in the plastic feet.

**If your shipment is incomplete, please call Customer Service.**

## Maintenance

Acetylated wood weathers a natural silver grey if left untreated outdoors. If you prefer the original look, clean with a bleach or detergent solution. When dry, apply a tinted, nontoxic penetrating stain, then apply a nontoxic mildewcide to minimize mildew growth. Scrubbing to remove paint stains may also remove some factory stain. However, this will not affect weatherproofing.

Frosted acrylic is UV stable and durable in the outdoors but will start to show scratching and ghosting with use. Deep scratches and gouges made by sharp objects such as keys, screwdrivers and knives cannot be repaired. Fine scratches may be reduced in severity or cosmetically hidden by using a plastic scratch remover, such as a NOVUS® branded plastic scratch remover, and a soft flannel pad.

Periodically inspect for splinters, broken or loose parts, and/or malfunctions. Remove from service when any condition develops that might make operation unsafe.



# Product Guide

## User and Maintenance Information

**IMPORTANT INFORMATION:**  
Please save this product guide.

### Cleaning

Mud, paint, and dirt can be removed with scrub brush and water. Over time outdoors, wood surfaces may blacken with mildew. Remove with detergent or a bleach solution. Clean acrylic surfaces with a mild soap solution and a soft cloth..

### Construction

The wooden components are manufactured from long lasting acetylated wood and finished with a water based stain. The easel panel surface is UV stable Frost Acrylic. All edges and corners are rounded for safety and ease of cleaning. End grain is protected by plastic guards. Stainless steel hardware is used throughout, and plastic components are formulated to ensure long life in outdoor environments.

### User Modifications

We are not responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

### Packaging Recycling

Please help preserve the earth for the children and recycle at an appropriate facility.

All our packaging is recyclable in two simple categories:

Packaging Materials	Recycling Category
Cardboard boxes and pads, newsprint	corrugated cardboard
Plastic wrap, sheet foam, foam pads	Plastic #4 LDPE

### Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

**Use only replacement parts supplied by Community Playthings.**

**If your shipment is incomplete, please call Customer Service.**

### CUSTOMER SERVICE:

#### United States

PO Box 2  
Ulster Park, NY 12487  
Office hours: 9-5 EST  
Phone (800) 777-4244  
Fax (800) 336-5948  
(845) 572-3468  
[www.CommunityPlaythings.com](http://www.CommunityPlaythings.com)  
[Sales@CommunityPlaythings.com](mailto:Sales@CommunityPlaythings.com)

