

Product Guide

User and Maintenance Information

Important Information:
Keep instructions for future use.

Customer Service:

United States

PO Box 2
Ulster Park, NY 12487
Office hours: 9-5 EST
Phone (800) 777-4244
Fax (800) 336-5948
(845) 572-3468

www.CommunityPlaythings.com
Sales@CommunityPlaythings.com



F481 Security Gate F482 Roomscapes Gateway F483 Roomscapes Entry

Recommended Use

The gates are a secure barrier to small children while allowing easy access for adults. The Gateway provides full sized ADA width access and an ADA threshold. The Security Gate is intended to secure spaces that do not need full access, such as closets, changing areas, etc.

⚠ WARNING

- ▲ To prevent serious injury or death, securely install gate or enclosure and use according to manufacturer's instructions.
- ▲ Never use with a child able to climb over or dislodge the gate or enclosure.
- ▲ Never leave children unattended.

⚠ CAUTION

- ▲ All gates should be attached at both ends to a wall or furniture by Roomscapes Posts 32" or longer. Use Wall Adapters where needed. The gate is not a toy. Children should not play on the gate.
- ▲ Roomscapes shelves and panels attached to these units must be at least 24" high.
- ▲ Roomscapes shelves attached to gates must be at least 3' long or connected at 45° or 90° to the gate threshold, with the following exception: the Security Gate and Roomscapes Gateway *may* connect in a straight line with a 2' shelf, but only if the other side is connected to a 3' shelf (or longer), to a wall or angled panels.
- ▲ Panels must connect at 45° or 90° to the gate threshold, with the following exception: the Security Gate and Roomscapes Gateway *may* connect in a straight line with a panel if a pair of Wings is added to the hinge side.

Assembly

To connect the couplings to Roomscapes, please follow the Roomscapes product guide.

If your shipment is incomplete, please call Customer Service

Operation

The gate swings 180° both ways. The child-proof latch is operated by simultaneously squeezing the hand-hold above and trigger below. To close the gate, push it shut. No operation of the trigger is necessary for latching.

Two rubber strips are adhered to the bottom of the threshold to help keep the gate in place on the floor. The grip of the rubber can be restored by cleaning the strips with a wet rag.

Maintenance

The latch and hinges are engineered to never need lubrication. Periodically inspect for secure connections, cracks, breaks, loose parts, missing parts, and/or malfunctions. Check Posts to be sure that all child-proof lock rings are engaged and working. Remove the product from service when any condition develops that might make operation unsafe.

Construction

Gates are made from solid maple, finished with a durable clear wood finish. Gate panel joints are glued mortise and tenon, pinned with a screw. Threshold is powder coated aluminum with rubber strips underneath. Hinges and latches are made from durable, engineered plastic.

Cleaning

Wooden Parts: Wipe with a damp cloth and mild detergent. Do not use excessive water.

For all plastic parts and threshold, including rubber strips on bottom: dust with a soft, damp cloth or chamois. Wash with dishwashing detergent and plenty of lukewarm water.



Product Guide

User and Maintenance Information

Important Information:
Keep instructions for future use.

Packaging Recycling

All our packaging is recyclable in two simple categories:

Packaging Materials	Recycling Category
Cardboard boxes and pads, newsprint	corrugated cardboard
Plastic wrap, sheet foam, foam pads	Plastic #4 LDPE

Please help us preserve the earth for the children and recycle at an appropriate facility.

User Modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.

Customer Service:

United States

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

Sales@CommunityPlaythings.com

